## 360 wireless LED motion sensor light

# **%** lyyt

#### **CAUTION:**

- ALL BATTERIES MUST BE THE SAME TYPE AS MENTIONED
- DO NOT MIX ALKALINE, STANDARD, OR RECHARGEABLE BATTERIES
- IF BATTERY CONTENTS ARE LEAKING, DISCONTINUE USE AND DISCARD
- DO NOT MIX OLD AND NEW BATTERIES
- REMOVE EXHAUSTED BATTERIES
- IF YOU HAVE ANY DOUBTS ABOUT THE INSTALLATION SEEK THE SERVICES OF A OUALIFIED INSTALLER

## **Specifications and Features:**

Material: ABS

Sensor sensitivity angle: 120 angle Sensor sensitivity distance:>3M Delay Time: 25-30 seconds

360° rotating head for angled use Includes mounting bracket and fixings Powered by 3 x AAA batteries(not included)

#### How to replace batteries:

- 1. Remove sensor light from base unit.
- 2. Twist to open (align arrows).
- 3. Insert 3 x AAA batteries ensuring the correct polarity.
- 4. Join two parts and twist to close.

### **OPERATION INSTRUCTIONS:**

## three control switches: on/ off /Auto.

- 1. Set the switch to ON in order to make the lamp light continuously
- 2. Set the switch to OFF in order to turn off the light completely
- 3. Set the switch to AUTO in order to activate the automatic light; as soon as a movement is detected 2 or 3 meters away, the lamp will turn on for 25 seconds and turn off automatically to save energy.









