## RCT-4 Rechargeable Clip Tuner

Thank you for choosing a Chord RCT-4 rechargeable clip tuner for convenient and accurate tuning of your instrument. Please read this user guide to ensure you get the most from your new tuner.

## Operation

It is advised to fully charge the RCT-4 before first use by connecting the USB-C input to a USB outlet or charger using the supplied charging lead. The battery charge indicator shows on the display whilst charging. Whenever this shows empty, the RCT-4 should be re-charged.

To operate the tuner, attach the clip to the headstock of your instrument, rotate the display for a clear view of the LCD screen and hold the On/Off/Mode button until the display lights. Short presses of the On/Off button will set the mode, with options for Chromatic, Guitar, Bass, and Ukulele. (Ukulele is for a soprano type).

Play a string and observe the detected note on the display, along with the virtual needle showing the tuning accuracy (flat – in tune – sharp). When in tune to the displayed note, the virtual needle will be in the centre and the backlight will change colour to green.


When not being used, press and hold the On/Off button to power the tuner down and preserve the battery. After 5 minutes with no note detected, the tuner will automatically power down.

## Specifications

Battery	3.7V 90mAh LI-ion rechargeable
Battery Life	270 minutes
Tuning modes	Chromatic, Guitar, Bass, Ukulele
Tuning stability	±1 cent
Dimensions	54 x 39 x 30mm
Weight	34g

**Disposal:** The "Crossed Wheelie Bin" symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Errors and omissions excepted. Copyright© 2024. AVEL Group Ltd. Unit 2-4 Bridgewater Park, Taylor Rd. Manchester. M41 7JQ AVSL (EUROPE) Ltd, Unit 3D North Point House, North Point Business Park, NewMallow Road, Cork, Ireland

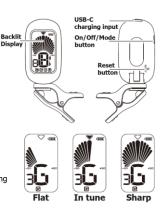



173.261UK

User Manual