




CH-50 Chorus Pedal

174.228UK

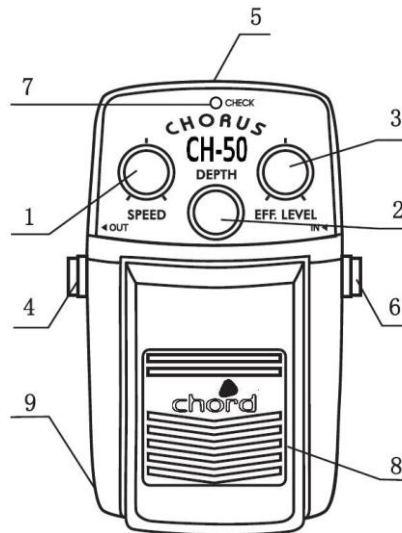

Functions

1. SPEED – Adjusts the rate of the sweep of the chorus effect
2. DEPTH – Increases or decreases the intensity of the effect
3. EFF. LEVEL – Adjusts the balance between effected and dry signal
4. Output – 6.3mm mono jack connector
5. D.C. In – DC jack for optional mains adapter
6. Input – 6.3mm mono jack connector
7. Indicator LED – Shows when effect is on (when it appears dim, replace battery)
8. Pedal Switch – Turns Effect On/Off
9. Battery housing – Compartment underneath for 9V battery

Notes on use

- Connecting to the Input jack enables the battery, please disconnect when not in use to preserve the battery
- Before connecting to an instrument, ensure amplifier volume is turned down

Specifications

- Input Impedance: 1M Ω
- Output Impedance: 1k Ω
- Power Supply: 9Vdc (battery or optional mains adapter) 14mA