




## BCH-50 Bass Chorus Pedal

174.240UK

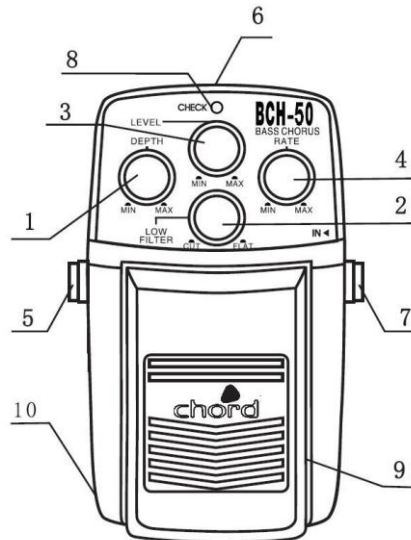

### Functions

1. DEPTH – Adjusts the depth of sweep of the chorus effect
2. LOW FILTER – Adjusts the degree to which the low frequencies are effected
3. LEVEL – Adjusts the amount of effect mixed in with the dry signal
4. RATE – Varies the speed of sweep of the chorus effect
5. Output – 6.3mm mono jack connector
6. D.C. In – DC jack for optional mains adapter
7. Input – 6.3mm mono jack connector
8. Indicator LED – Shows when effect is on (when it appears dim, replace battery)
9. Pedal Switch – Turns Effect On/Off
10. Battery housing – Compartment underneath for 9V battery

### Notes on use

- Connecting to the Input jack enables the battery, please disconnect when not in use to preserve the battery
- Before connecting to an instrument, ensure amplifier volume is turned down

### Specifications

- Input Impedance: 1M $\Omega$
- Output Impedance: 1k $\Omega$
- Power Supply: 9Vdc (battery or optional mains adapter) 28mA