


# RF Modulator Manual

Thank you for purchasing this modulator, it allows you to use devices that have SCART or RCA Phono outputs only, on a TV or Video that either has no SCART or Phono inputs or none spare. It also allows you to set up a dedicated TV channel for a device instead of it appearing on you're A/V channel which may be showing an assortment of other devices.

Further dedicated TV channels can be obtained by linking additional modulators via the TV/VCR output, to the additional modulators. This product also features a SCART thru loop option that allows any device connected to the modulator to appear on you're A/V channel, or appear on another separate device such as a video recorder.

## CONNECTIONS

- 1 - According to the device you are connecting, either use the SCART input (1) or the RCA phono inputs (2) in their correct colour codings: Yellow = Video, Red = Audio Right, White = Audio Left.
- 2 - If your existing aerial has not been previously connected to the device you are connecting or further up the chain, plug your aerial into the aerial socket (4)
- 3 - Connect your TV or VCR to the coaxial socket marked TV/VCR (5)
- 4 - If you are using the SCART thru loop facility, connect your next device to scart output (3)
- 5 - Please ensure that your 13Amp socket is switched off and plug the DC power lead into the DC socket, insert the AC/DC adaptor into your 13Amp socket and switch on mains power.

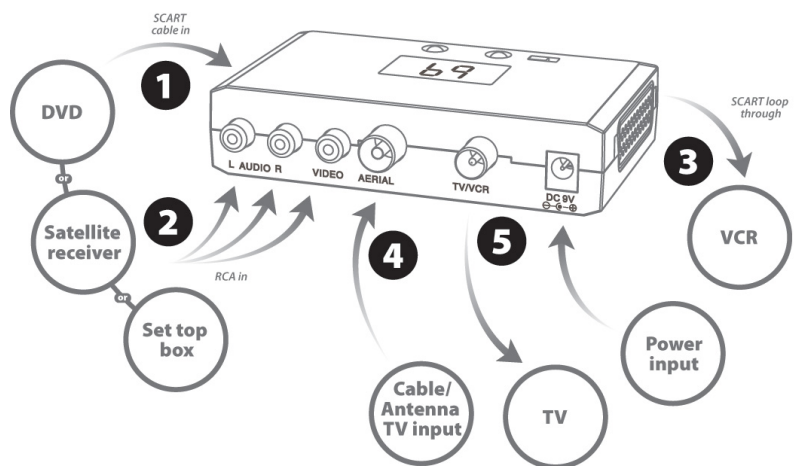

## WARNING

This modulator must never be connected directly into the electrical mains supply. It must only be powered via an AC/DC adaptor at 12V DC 250mA. This product is not designed for outdoor use or to be used in damp conditions.

## CHANNEL SETTING

When you are fully connected, switch the switch on the top panel to ON.

To select which channel on your TV you wish the device to appear on, it is best if you tune your TV to a spare channel away from your existing channels and leave the screen on.

On the modulator using the channel + or – buttons start at channel 21 which will show in the LED display, work upwards until the device programme or picture appears on your TV. Make a note of the displayed number on the modulator for future reference, please leave 3 seconds between each channel +/- operation.

## TROUBLE SHOOTING

If when the picture appears on your TV's selected channel, there is distortion or interference this normally means one of your devices or another existing channel is affecting that particular channel you have tuned to. In this case tune your TV to at least 3 channels away and reset your modulator as before.