



# **LUX-LD36W**

**RGB Colour Moving head**

**150.445UK**

**LUX-LD36W RGB-colour moving head: For indoor use only**

**Caution! Please read this manual carefully before operating! Damage caused by misuse is not covered by the warranty!**

**1. General Introduction :**

This LED colour wash moving head features 36 x 1W 15mmØ LEDs. The front panel has a Perspex diffuser, allowing for advanced colour mixing and a wider coverage of light. This free-standing unit is also mountable and comes supplied with the appropriate brackets. It features 2 auto modes, 2 sound-to-light modes and 10 channels of DMX which can be programmed with any universal DMX controller, making it ideal for both stage shows and nightclubs.

**Features :**

- 36 x 1W high power LEDs (12 red, 12 blue, 12 green)
- Innovative RGB wash effect
- Special optical design to optimize the lighting effect/output
- Vivid colours with high light output
- 10 channel DMX (RGB 0-100%, strobe, pan, tilt, pan speed and tilt, RGB preset colours, pan fine and tilt fine (16bit))
- Fan cooled
- LED indicator on the housing
- Mounting brackets supplied
- We recommend that this product is used within the guidelines HSG95

**14. Disposal :**

Please disposal of the unserviceable device according to the current statutory requirements.

**15. Technical specification :**

<b>Voltage :</b> 230Vac, 50Hz	<b>LED Type :</b> 12R, 12G, 12B
<b>LED :</b> 36 x 1W RGB LED	<b>LED Life:</b> 10,000 Hours
<b>Fuse :</b> F5A	<b>Lux:</b> 1470lux @3m
<b>Power Consumption :</b> 60W Max	<b>Beam Angle:</b> 15-22° diffused
<b>Dimensions :</b> 280 x 280 x 300mm	<b>Weight:</b> 5.6g

Note: Conforms to Laser and LED Safety standard BSEN60825-1 2007

Manual copyright protected by QTX Light

**13. DMX Controlling :**

DMX Channel	Function & Value
<b>Channel 1</b>	000-255 Red brightness 0-100%
<b>Channel 2</b>	000-255 Green brightness 0-100%
<b>Channel 3</b>	000-255 Blue brightness 0-100%
	000-020 No function
<b>Channel 4</b>	021-115 Dimmer 0-100
	116-243 Shutter from fast to slow
	244-255 Full
<b>Channel 5</b>	000-255 Pan course 0-540°
<b>Channel 6</b>	000-255 Tilt course 0-230°
<b>Channel 7</b>	000-255 X/Y speed fast to slow
<b>Channel 8</b>	000-255 Pan/Tilt speed fast to slow
<b>Channel 9</b>	000-255 Pan fine adjustment 2.4°
<b>Channel 10</b>	000-255 Tilt fine adjustment 2.4°
<b>Channel 11</b>	150-200 Reset after 10 seconds

**2. Package Contents :**

Please check the contents to ensure that the product has been received in good condition.

Light x 1unit (power lead attached)	User's Guide x 1pcs
-------------------------------------	---------------------

If you find any accessory is missing or the lighting has arrived with any problems, please contact your local dealer at once. Do not try to fix this item yourself or you will lose the warranty. Please keep the original package and invoice for any possible replacement or returned demand.

**3. Installation :**


Every person involved with the installation, operation and maintenance of this device should be qualified and follow the instructions of this User Guide. We recommend that this product is not used for audience scanning and should be used within the guidelines of radiation of lasers used for display purposes "HSG95". When you connect to the main power supply the device will illuminate and the light effect will change with music when in sound activated mode.


**10. Mounting instruction :**

The fixture may be mounted in any position provided there is adequate room for ventilation. It is important never to obstruct the fan or vent pathway. Mount the fixture using a clamp. Unscrew the safety screws underneath the device and fix a G-Clamp to the fixture. After finding desired position tighten the G-Clamp. When selecting installation location, take into consideration routine maintenance. Safety cables must always be used. Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperatures changes or restricted ventilation.


**4. Caution :**

For your safety, please kindly pay attention to all of the warnings below:

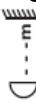- Always plug in the power plug last and disconnect from the mains, when the device is not in use or before cleaning.
- Do not install and operate the device in rain or extreme heat, moisture or dusty environments.
- This device is for indoor use only in a dry environment.
- Do not switch on immediately but wait until it reaches to room temperature, if the device has been exposed to drastic temperature fluctuations.
- Do not shake the device and avoid brute force when installing or operating
- Do not spread the smoke or bubble of effect machine directly to the device.
- Do not use the device during thunderstorms and please disconnect the power.
- Do not use solvents or aggressive detergent to clean the device. Use a soft and clean cloth.
- Do not modify the device or the connected power cord without authorization.
- Use appropriate safety-rope for safety.
- Do not stare to the light.
- The symbol  determines the minimum distance from lighted objects. The minimum distance between light-output and the illuminated surface must be more than 0.5m.

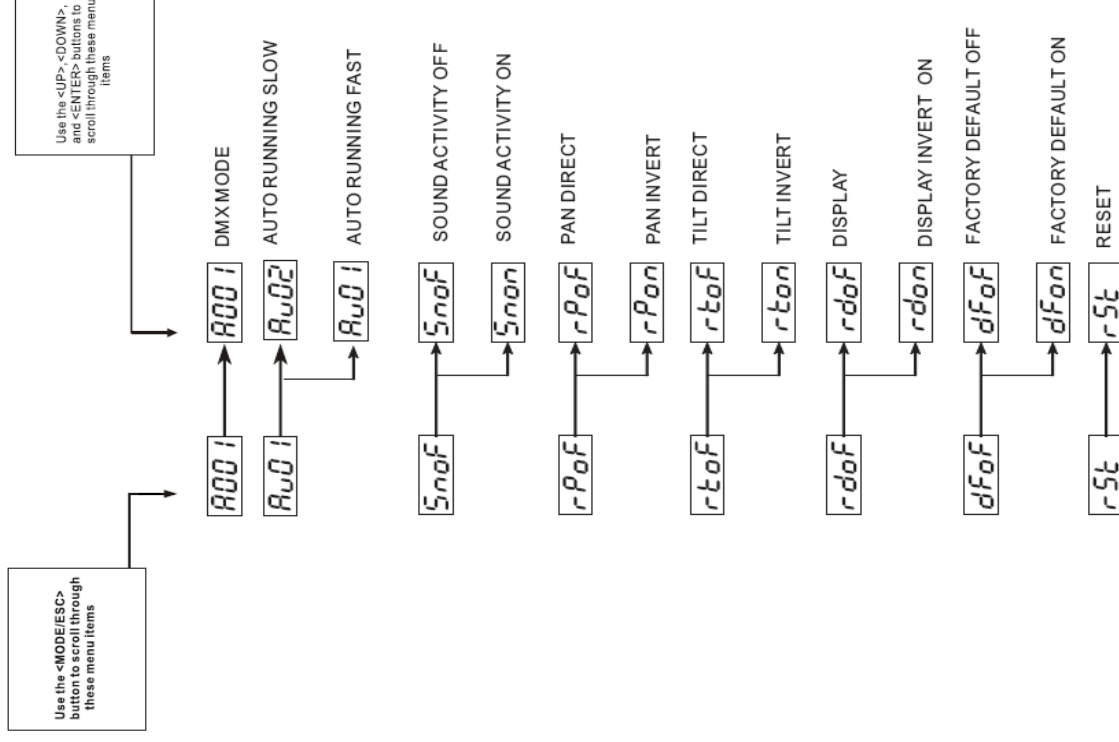

**12. Digital Display Setting & Function :**

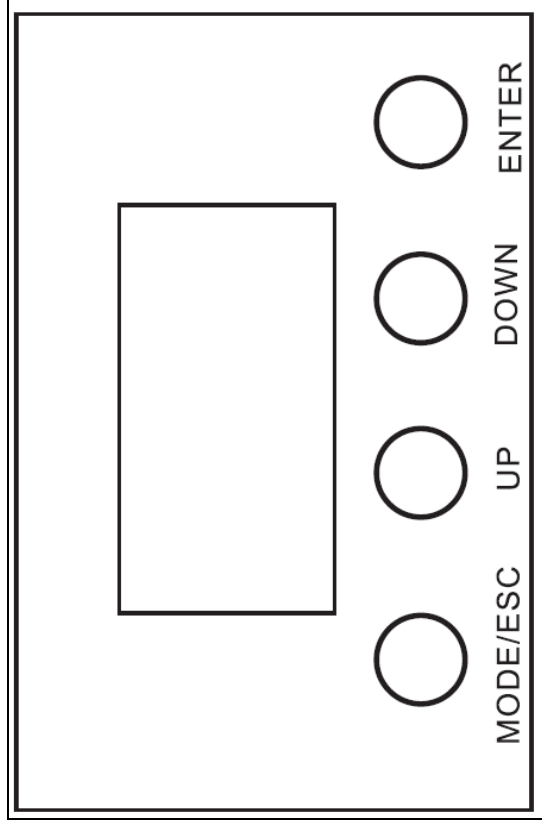

**MODE/ESC:** Function mode or withdraw the last menu

**UP:** Increase one step each time.

**DOWN:** Decrease one step at each time.

**ENTER:** Confirm menu selection

**6. Connect with power supply:**

Use the plug to connect to the main power supply as following.

Line	Connection	International signal
Brown	Live	L
Blue	Neutral	N
Yellow /Green	Earth	E

**7. Quick Trouble Shooting :**

7.1 if the unit is not functional – Check if main power is on and fuse.

7.2 if the unit is not reacting to music – check the unit is in “M-SO” mode on the display.

**8. Replacing Fuse :**

Disconnect from the main power supply first, then remove the fuse holder above the IEC Socket to reveal the fuse. Replace the correct fuse rating as stated on lighting or user guide. Then, lock the fuse holder cover back into place.

**9. General Maintenance :**


To maintain optimum performance and minimize wear, fixtures should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced lamp life and increased mechanical wear. Be sure to power off fixture before conducting maintenance.

Unplug fixture from power. Use a vacuum or air compressor and a soft brush to remove dust collected on external vents and internal components. Clean all

glass when fixture is cold with a mild solution to the cloth or tissue, and drag dirt and grime to the outside of the lens. Gently polish optical surface until they free of haze and lint.

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequently depends on the environment in which the fixtures operates: damp, smoky or particularly dirty surroundings can require cleaning fluid. Always dry the parts carefully. Clean the external optics at least every 20 days.

**11. Layout for the 150.445UK:**

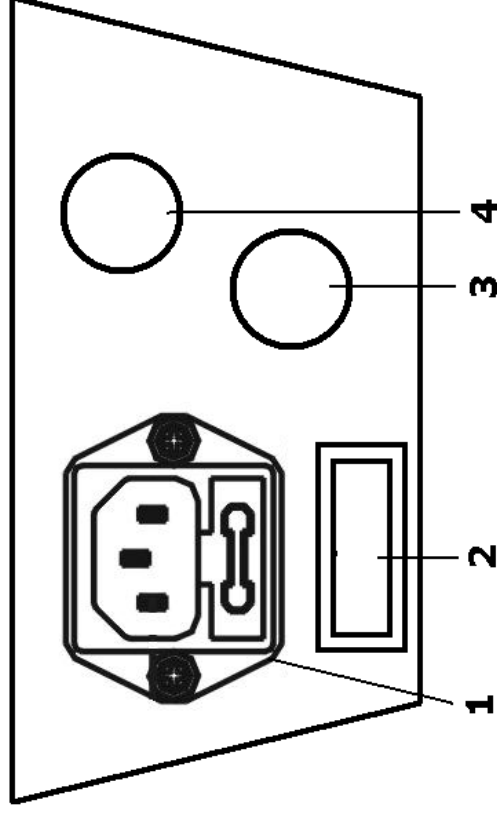

- 1. IEC Power input
- 2. Power switch on/off
- 3. DMX Output
- 4. DMX Input